


# Daylight Savings Update PIX 10-21

## Normal Program Mode

These instructions must be followed in the order given.

### 1. Understanding the Front Panel

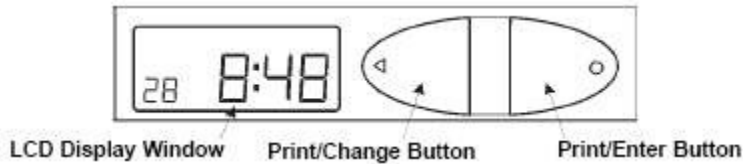


### 2. Plug In the Power Cord

### 3. The Reset Button

**Note:** To exit the programming mode and return to the time display, press the RESET button at any time.

The RESET Button is located in the lower right corner on the bottom of the clock.

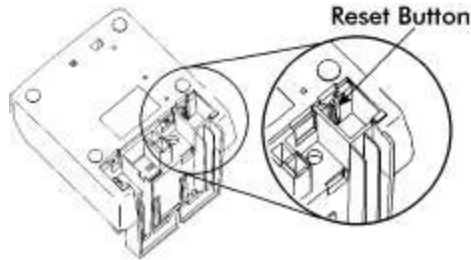


### 4. Entering the Normal Program Mode

The following steps describe how to get into the Normal Program mode.

**Note:** The password is printed inside the top of the cover case: "8088".

1. Press and hold down the RESET button.
2. While holding down the RESET button, press and hold down the ENTER button.
3. While holding down the ENTER button, release the RESET button.
4. When *Prog* flashes in the display, release the ENTER button.
5. Press the ENTER button again.
6. Press the CHANGE button until the 8 appears in the first position, then press the ENTER button.
7. Press the CHANGE button until the 0 appears in the second position, then press the ENTER button.
8. Press the CHANGE button until the 8 appears in the third position, then press the ENTER button.
9. Press the CHANGE button until the 8 appears in the fourth position, then press the ENTER button.
10. When the display flashes 8088, press the ENTER button. P1 will be displayed, press the left button to continue to P2

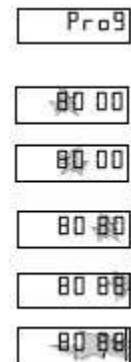

### 6. Setting the Time

**Note:** Use 24 hour and 60 minute format when setting the time. For example: 2:00 pm = 14:00.

1. When the display flashes *P2 Clock*, press the ENTER button.
2. Press the CHANGE button to choose 12 hour AM/PM display or 24 hour military time, then press the ENTER button.
3. Press the CHANGE button until the correct hour appears, then press the ENTER button.
4. Press the CHANGE button until the correct minutes appear, then press the ENTER button.
5. When the display flashes the correct time, press the ENTER button.
6. When the display flashes *P2 Clock*, press the CHANGE button to move to the beginning of the Daylight Saving Setting.



# Daylight Savings Update PIX 10-21

## 7. The Beginning of the Daylight Saving Setting

**Note:** The PIX-21 will automatically adjust for Daylight Saving Time. This will take effect on the second Sunday in March and on the first Sunday in November. To disable Daylight Saving Time, set the beginning date equal to the ending date.

1. When the display flashes *P<sub>3</sub> EdL*, press the ENTER button.
2. Press the CHANGE button until the correct year appears, then press the ENTER button.
3. Press the CHANGE button until the correct month appears, then press the ENTER button.
4. Press the CHANGE button until the correct date appears, then press the ENTER button.
5. When the display flashes the correct year, month and date, press the ENTER button.
6. When the display flashes *P<sub>3</sub> EdL*, press the CHANGE button to move to the end of the Daylight Saving Setting.

Begin Date 2008  
08 03 09

*P<sub>3</sub> EdL*

99 0401

99 0401

99 0401

99 0402

*P<sub>3</sub> EdL*

## 8. The End of the Daylight Saving Setting

1. When the display flashes *P<sub>4</sub> EdL*, press the ENTER button.
  2. Press the CHANGE button until the correct year appears, then press the ENTER button.
  3. Press the CHANGE button until the correct month appears, then press the ENTER button.
  4. Press the CHANGE button until the correct date appears, then press the ENTER button.
  5. When the display flashes the correct year, month and date, press the ENTER button.
  6. When the display flashes *P<sub>4</sub> EdL*, press the CHANGE button to move to the end of the Program.
- Note:** To disable the Daylight Saving Setting, set the beginning and ending date to the same date.

End Date 2008  
08 11 02

*P<sub>4</sub> EdL*

99 1028

99 1028

99 1028

99 1029

*P<sub>4</sub> EdL*

## 9. Exit Program Mode

1. When the display flashes *End*, press the ENTER button to exit the program mode.

*End*

**Buffalo Time Clock, Inc.**

1942 Colvin Blvd.

Tonawanda, NY 14150

Phone: 716-831-8044 Fax: 716-834-4136