 


Daylight Savings Update PIX-28

Understanding the Interface

Unlock and remove the cover. Locate the **PROGRAM**, **CHANGE**, **ENTER**, **HOURL**, and **MINUTE** buttons on top of the clock.

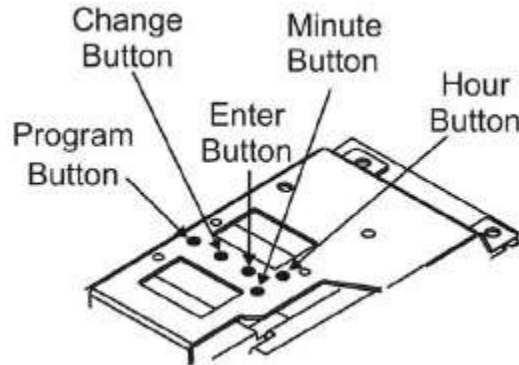

The **PROGRAM** button is used to enter and exit the Program Mode. If a program step is in the process of being changed when this button is pushed, the new information will not be saved.

The **CHANGE** button is used to change the information on the display.

The **ENTER** button is used to accept the information shown on the display and save it in memory or to enter a program mode.

The **HOURL** button is used to advance the hour in the display by increments of 1.

The **MINUTE** button is used to advance the minutes in the display by increments of 1.

The **RESET** button is located on the rear of the clock, underneath the unit. Pressing this button will clear any jams or errors.

Entering the Program Mode


1. To start the Program Mode, unlock and remove the cover.
2. Press and hold the PROGRAM button to access the Main

Programming Menu, which consists of the following items:

Code	Menu	Function
P1	dAtE	Year, Month, and Date settings
P2	ClOc	Clock settings
P3	dLSt	Daylight Saving Time Enable/Disable
P4	Prnt	Quick Print Setup Codes
P5	OptR	Other Options Menu

Note: To exit the Program Mode at any time, press the Program button.

 3. When dAtE P1 flashes in the display, release the PROGRAM button.



Time (Clock) Setting

1. Enter the Program Mode and press the CHANGE button. When ClOc P2, flashes in the display, press the ENTER button.



Note: Seconds are fixed at 00 and cannot be changed. The seconds will start incrementing from 00 when the ENTER button is pressed.



2. Press the CHANGE button until the correct minute appears, then press the ENTER button.



3. Press the CHANGE button until the correct hour and time of day appears, then press the ENTER button.



4. When the display flashes the correct time, press the ENTER button.



5. When the display flashes ClOc P2, press the CHANGE button to move to the Daylight Saving Time Setting or press the PROGRAM button to exit the Program Mode.



Begin Daylight Saving Time

This setting defines the start or beginning date of Daylight Saving Time. Once set, it will automatically adjust every year. You will only need to program it once. Daylight Saving Time is enabled/disabled in the Main Programming Menu.

1. Enter the Program Mode and press the CHANGE button until 0thr P5 flashes in the display. Press the ENTER button.



2. Press the CHANGE button until bdLt I 6 flashes in the display. Press the ENTER button.



 
3. Press the CHANGE button until the correct year that Daylight Saving Time is set to begin appears in the display, then press the ENTER button.



4. Press the CHANGE button until the correct day that Daylight Saving Time is set to begin appears in the display, then press the ENTER button.




5. Press the CHANGE button until the correct month that Daylight Saving Time is set to begin appears in the display, then press the ENTER button.



6. When the display flashes the correct year, month and date, press the ENTER button.



 7. When the display flashes bdLt I 6, press the CHANGE button to move to the End Daylight Saving Time Date Setting, or press the PROGRAM button to exit the Program Mode.



End Daylight Saving Time

This setting defines the end date of Daylight Saving Time. You will only need to program it once. Once set, it will automatically adjust every year. Daylight Saving Time is enabled/disabled in the Main Programming Menu.

1. Enter the Program Mode and press the CHANGE button until 0 hr P5 flashes in the display. Press the ENTER button.



2. Press the CHANGE button until EdLt 17 flashes in the display. Press the ENTER button.



 
3. Press the CHANGE button until the correct year that Daylight Saving Time is set to end appears in the display, then press the ENTER button.



4. Press the CHANGE button until the correct day that Daylight Saving Time is set to end appears in the display, then press the ENTER button.




5. Press the CHANGE button until the correct month that Daylight Saving Time is set to end appears in the display, then press the ENTER button.



6. When the display flashes the correct year, month and date, press the ENTER button.



7. When the display flashes EdL 17, press the CHANGE button to move to Diagnostics, or press the PROGRAM button to exit the Program Mode.



Buffalo Time Clock, Inc.

1942 Colvin Blvd.

Tonawanda, NY 15140

716-831-8044 716-834-4136